


# Quick Fist<sup>®</sup> GO-BETWEEN Rubber Clamp

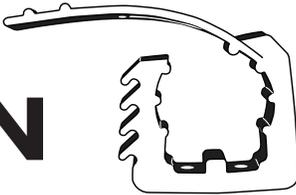

## Installation Instructions:

1. Mount with two 1/4" fine thread screws or bolts and washers (under the bolt or screwhead). Do not over-tighten, as the rubber just spreads.
2. The strap can be mounted with it facing in any direction.
3. To clamp: put a tool or implement into the jaws and push the strap to the desired tightness.


Made in USA

**End of the Road, Inc**  
2212 Dortch Ave.  
Nashville, TN 37210, USA  
[www.endroad.com](http://www.endroad.com)

ITEM #80011

U.S. and world wide patents pending  
UK patent 2403262

# Quick Fist<sup>®</sup> GO-BETWEEN Rubber Clamp

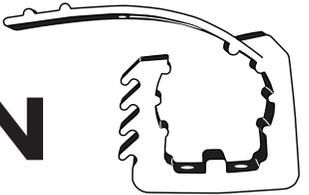

## Installation Instructions:

1. Mount with two 1/4" fine thread screws or bolts and washers (under the bolt or screwhead). Do not over-tighten, as the rubber just spreads.
2. The strap can be mounted with it facing in any direction.
3. To clamp: put a tool or implement into the jaws and push the strap to the desired tightness.

Made in USA

**End of the Road, Inc**  
2212 Dortch Ave.  
Nashville, TN 37210, USA  
[www.endroad.com](http://www.endroad.com)

ITEM #80011

U.S. and world wide patents pending  
UK patent 2403262